EDISEJA 21

BCD 100 BCD Coder User manual



Company:Device:Document:Code:Date:Ediseja 21BCD 100User manualBCDMU36704.04.2024



Content

1	PREFACE	3
2	DESCRIPTION	5
2.1	TYPICAL APPLICATION	5
2.2	TYPICAL CONNECTION	6
3	SCHEMATIC	7
4	INSTALLATION	8
4.1	INSTALLATION	8
5	COMMISSIONING & MAINTENACE	9
5.1	COMMISSIONING	9
5.2	MAINTENANCE	9
6	TECHNICAL DATA	.10
7	DIMENSIONS	.11
8	ORDERING	.12



1 PREFACE

Liability statement

We have checked the contents of this manual to ensure that the descriptions of both hardware and software are as accurate as possible. However, deviations may occur so that no liability can be accepted for any errors or omissions contained in the information given.

The contents of this manual will be checked in periodical intervals, corrections will be made in the following editions.

We reserve the right to make technical improvements without notice.

Contact

If you have any questions or comments related to this product please contact us on:

Ediseja 21 d.o.o. Stegne 21C 1000 Ljubljana Slovenia – EU

Tel: 00 386 51 643 411

Email: grega.flander@ediseja21.com

www.ediseja21.com

Copyright

Copyright © Ediseja 21, 2020. All rights reserved.

Explanation of the symbols



Read the instructions!



Device was tested with 2,5 kV AC voltage to check the device insulation.



Device ground terminal.



Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC; the affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.

Warnings

Device:	Document:	Code:	Date:	Page:
BCD 100	User manual	BCDMU367	04.04.2024	3



In this paper the following terms are used:

Danger

indicates that death, severe personal injury or substantial property damage will result if proper precautions are not taken.

Warning

indicates that death, severe personal injury or substantial property damage can result if proper precautions are not taken.

Caution

indicates that minor personal injury or property damage can result if proper precautions are not taken. This particularly applies to damage on or in the device itself.

General information

These paper contain the information that is necessary for the proper and safe operation of the described devices. This paper is intended for technically qualified personnel.



Warning!

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described devices after being familiar with warnings and safety notices in this paper and other safety regulations.



Warning!

Device must operate completely assembled! Device must be used as described. No modifications of the device should be made.



Warning!

Do not open device while it is energized! Hazardous voltage is present inside the device. Disconnect all connectors before opening!



Warning!

If device is damaged disconnect all connectors! Send it to the manufacturer for inspection.



Warning!

Connect to earth before attaching any connector!

Page:	Device:	Document: Code:	Date:
4	BCD 100	User manual BCDMU367	04.04.2024

Page:

2 DESCRIPTION

BCD 100 is device which converts DC signals to BCD code. Usually is used for converting many transformer tap changer positions into BCD code. BCD code is then captured by bay computer which send tap changer position to SCADA.


BCD 100 / 26 has 26 inputs and 6 outputs.

BCD 100 / 36 has 36 inputs and 6 outputs.

BCD 100 / 26.2 has 26 inputs and 2 \dot{x} 6 outputs. Output groups are not galvanically separated against each other.

Device outputs are not galvanically separated from inputs. Device does not need power supply as it is powered from inputs.


2.1 TYPICAL APPLICATION

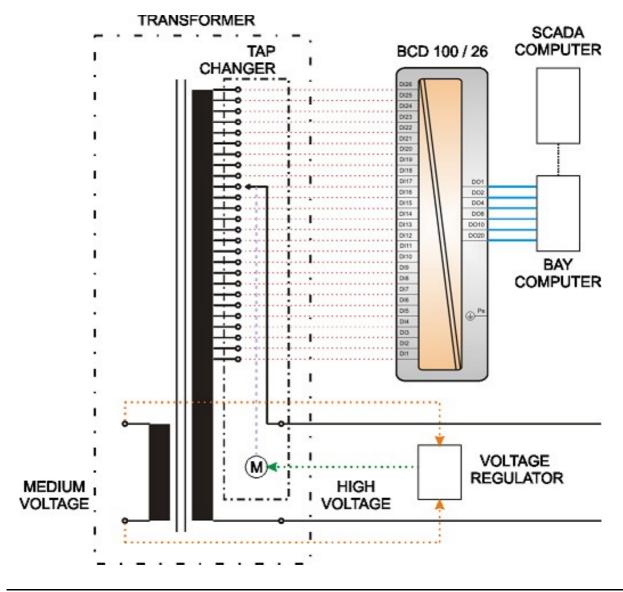


Device:	Document:	Code:	Date:
BCD 100	User manual	BCDMU367	04.04.2024





2.2 TYPICAL CONNECTION

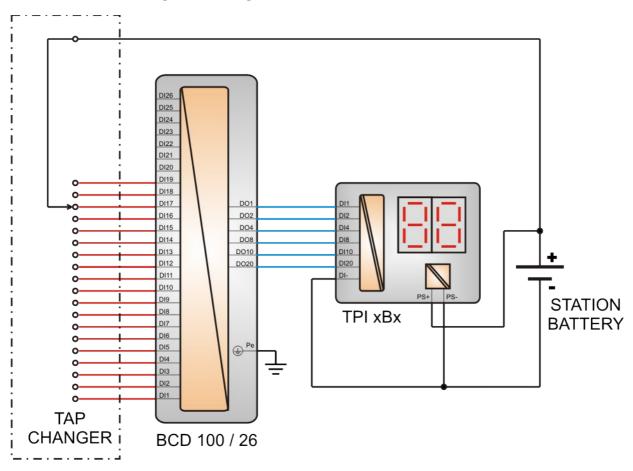

3 SCHEMATIC

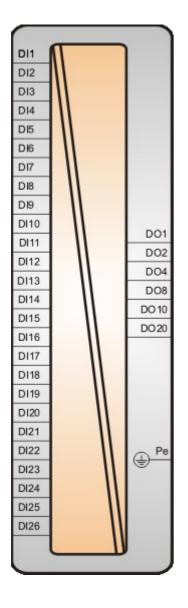

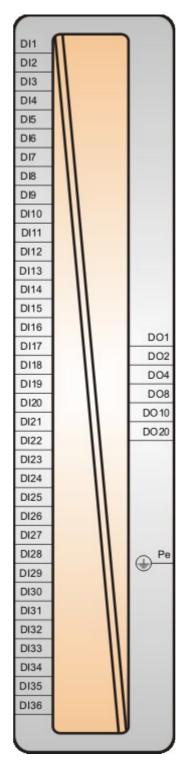

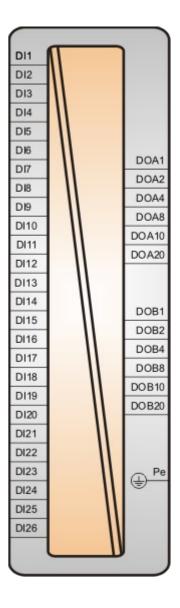

Page:

Picture 1: General diagram BCD 100 / 26 (left), BCD 100 / 36 (middle), BCD 100 / 26.2 (right)

Device:	Document:	Code:	Date:
BCD 100	User manual	BCDMU367	04.04.2024

4 INSTALLATION

4.1 INSTALLATION




Warning!

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described devices after being familiar with warnings and safety notices in this paper and other safety regulations.

Following instruction must be taken into consideration:

- ◆ The device must be accessible to qualified personnel only.
- ◆ The device is permitted to operate in enclosed housing or cabinet only.
- ◆ The device location must be vibration-free.
- ◆ The admisible operating temperature must be observed.
- ◆ Check the device for damage at unpacking. If device is damaged it must not be installed but it should be send to the manufacturer for repair.
- ◆ The device should not be opened.
- ◆ The device should be mounted on a 35 mm rail (acc to EN 50022).
- ◆ Attach ground wire before attaching power supply. Device must be grounded during operation! Use 2,5 mm² wire.
- ♦ Single core or stranded wire 0,5 2,5 mm² must be used. If stranded wire is used, ferrules must be used to prevent fraying. Recommended stripping lenght is 5 mm.
- Protective earthing wire must be terminated with tinned copper ear terminal.

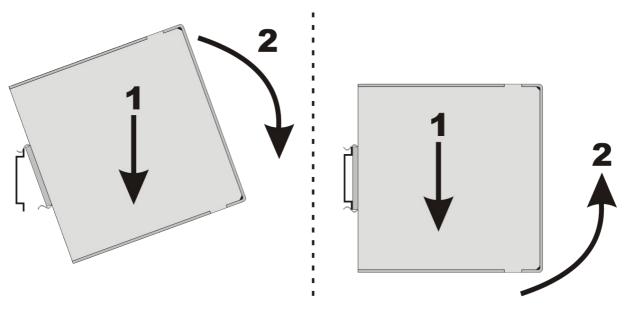

Picture 2: left; installation, right: deinstallation

Page:	Device:	Document: Code:	Date:
8	BCD 100	User manual BCDMU367	04.04.2024

9

COMMISSIONING & MAINTENACE 5

5.1 COMMISSIONING



Warning!

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described device after being familiar with warnings and safety notices in this paper and other safety regulations.

Following instruction must be taken into consideration:

- ◆ Device must operate completely assembled! Device must be used as described. No modifications of the device should be made.
- ◆ Attach ground wire before attaching any connector. Device must be grounded during operation!
- Do not open device while it is energized! Hazardous voltage is present inside the device.

5.2 **MAINTENANCE**

The device is maintenance-free. Disconnect power supply before cleaning it. Use moist cloth. Do not use liquids.



TECHNICAL DATA 6


Input / Output				
Rated voltage	DC		24 - 250 V	
Permissible voltage range	DC 19 V - 275 V		19 V - 275 V	
Current	DC		0,5 A max	
Connector type	screw type "MSTE		B" Phoenix 16 pin	
	crossection		0,5 – 2,5 mm ²	
Wire	type		single or stranded wire	
vviie	voltage rating		500 V	
	colour		see valid standard	
Ground wire	crossection		Cu, 2,5 mm ²	
Ground wire	cc	olour	see valid standard	

	Device				
Weight	cca 0,3 kg				
	(H)	(D)	(W)		
Dimensions	105 mm	111 mm +	40 mm (BCD 100 / 26)		
(see picture)		connectors	60 mm (BCD 100 / 36 & BCD 100 / 26.2)		
Temperature range	0 °C to +55 °C				
Humidity operating	up to 95 % (noncondensing)				
Enclosure		Material	Al		
Eliciosure	IP		20		
Mount type	standard DIN 35 rail (acc. to DIN EN 50022)				
Class	ı				
Overvoltage category	II				


Page:

11

7 DIMENSIONS

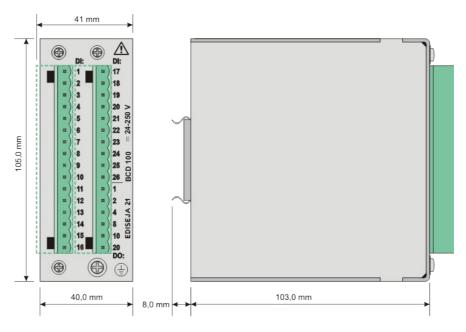

Picture 3: BCD 100 / 26 dimensions

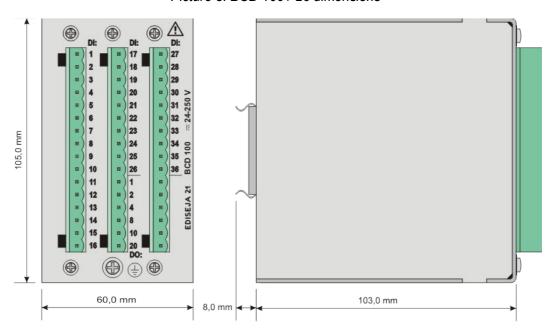

Picture 4: BCD 100 / 36 & BCD 100 / 26.2 dimensions

 Device:
 Document:
 Code:
 Date:

 BCD 100
 User manual BCDMU367
 04.04.2024

8 ORDERING



Contact:

Ediseja 21, razvoj elektronskih naprav, d.o.o.

Stegne 21C 1000 LJubljana Slovenia – EU

Tel: 00 386 51 643 411 grega.flander@ediseja21.com

www.ediseja21.com