

CMU 100
10/100Base-Tx
Ethernet to 7x, 6x, 5x,
4x Multimode Fiber
Optic Star Coupler
User Manual

CMU 100 / 2.9.6.6.6.6.6.6 – 12, CMU 100 / 8.9.6.6.6.6.6.6 – 12,
CMU 100 / 2.9.6.6.6.6.6.6 – 12, CMU 100 / 8.9.6.6.6.6.6.6 – 12,
CMU 100 / 2.9.6.6.6.6.6.6 – 12, CMU 100 / 8.9.6.6.6.6.6.6 – 12,
CMU 100 / 2.9.6.6.6.6.6.6 – 12, CMU 100 / 8.9.6.6.6.6.6.6 – 12



Company:	Device:	Document:	Code:	Date:
Ediseja 21	CMU 100 / 2.9.6.6.6.6.6.6 – 12	User manual	CMUMU296	01.09.2019

Content

1	PREFACE.....	3
2	CMU 100 SYSTEM.....	5
2.1	DESCRIPTION.....	5
2.1.1	SOFTWARE.....	5
2.1.2	HARDWARE.....	5
3	10/100BASE-TX ETHERNET TO 7x MULTIMODE FIBER OPTIC STAR COUPLER.....	7
3.1	DESCRIPTION.....	7
3.2	TYPICAL APPLICATIONS.....	7
3.3	APPEARANCE.....	9
3.4	HARDWARE DESCRIPTION.....	9
3.4.1	MAIN BOARD.....	9
3.4.2	ETHERNET INTERFACE BOARD.....	10
3.4.2.1	LANTRONIX CPR MANAGER.....	11
3.4.2.2	LANTRONIX INSTALLER SETTINGS.....	12
3.4.3	MULTIMODE FIBER OPTIC INTERFACE BOARD.....	17
4	SCHEMATIC.....	19
5	INSTALLATION.....	20
5.1	INSTALLATION.....	20
6	COMMISSIONING & MAINTENACE.....	22
6.1	COMMISSIONING.....	22
6.2	MAINTENANCE.....	22
7	TECHNICAL DATA.....	23
8	DIMENSIONS.....	25
9	ORDERING.....	26

1 PREFACE

Liability statement

We have checked the contents of this manual to ensure that the descriptions of both hardware and software are as accurate as possible. However, deviations may occur so that no liability can be accepted for any errors or omissions contained in the information given.

The contents of this manual will be checked in periodical intervals, corrections will be made in the following editions.

We reserve the right to make technical improvements without notice.

Contact

If you have any questions or comments related to this product please contact us on:

Ediseja 21 d.o.o.

Stegne 21C

1000 Ljubljana

Slovenia – EU

Tel: 00 386 51 643 411, 051 643 411

Email: grega.flander@ediseja21.com

www.ediseja21.com

Copyright

Copyright © Ediseja 21, 2019. All rights reserved.

Explanation of the symbols



Read the instructions!



Device was tested with 2,5 kV AC voltage to check the device insulation.



Device ground terminal.



Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC; the affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.

Warnings

In this paper the following terms are used:

Danger

indicates that death, severe personal injury or substantial property damage will result if proper precautions are not taken.

Company:	Device:	Document:	Code:	Date:	Page:
Ediseja 21	CMU 100 / 2.9.6.6.6.6.6.6 – 12	User manual	CMUMU296	01.09.2019	3

Warning

indicates that death, severe personal injury or substantial property damage can result if proper precautions are not taken.

Caution

indicates that minor personal injury or property damage can result if proper precautions are not taken. This particularly applies to damage on or in the device itself.

General information

These paper contain the information that is necessary for the proper and safe operation of the described devices. This paper is intended for technically qualified personnel.

**Warning!**

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described devices after being familiar with warnings and safety notices in this paper and other safety regulations.

**Warning!**

Device must operate completely assembled! Device must be used as described. No modifications of the device should be made.

**Warning!**

Do not open device while it is energized! Hazardous voltage is present inside the device. Disconnect all connectors before opening!

**Warning!**

If device is damaged disconnect it from power supply! Send it to the manufacturer for inspection.

**Warning!**

Connect to earth before attaching power supply!

2 CMU 100 SYSTEM

2.1 DESCRIPTION

Communication unit (CMU 100) is modular system of communication devices that can be used for various of tasks such as:

- ◆ communication converter (for example RS232 to RS485)
- ◆ star coupler (for example 1 fiber optic to 7 fiber optics)
- ◆ repeater (for example RS485/485)
- ◆ communication isolator (for example for preventing ground loops)
- ◆ communication listener - debugger
- ◆ PC serial com port extender (for example USB to 4 serial com)

CMU 100 device is a couple of software and hardware. For different purposes, different software versions and different hardware configuration have been developed.

2.1.1 SOFTWARE

Software is application dependent and allows different hardware configurations. Software's task is switching between communication ports and allows almost any combination between them.

2.1.2 HARDWARE


Hardware is based on main board with power supply and port switching logic. On that board, interface boards are attached. CMU 100 can handle up to 8 different interface boards. Currently available interface boards:

- ◆ RS232
- ◆ isolated RS485
- ◆ Multimode Fiber Optic with ST and SMA connectors
- ◆ Singlemode Fiber Optic with SC connectors
- ◆ Versatile Link Fiber Optic
- ◆ USB
- ◆ ethernet (with one virtual com port)

Housing is aluminium and intended for mount on standard DIN 35 rail (acc. to DIN EN 50022). 3 different housings have been made. Depends on how many interfaces device has, appropriate housing is used.

Hardware settings

All settings on the device can be made from outside by a DIL switch. It is not necessary to open the housing.

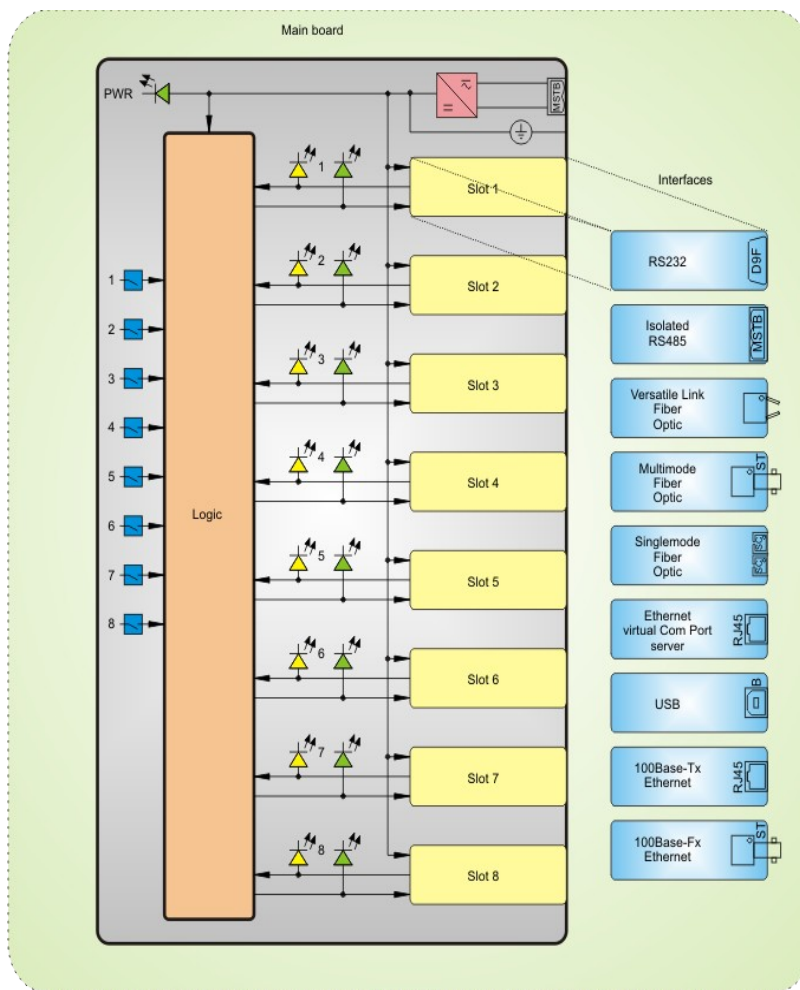

Picture 1: CMU 100 system general diagram

Due to similarity among stated types, only type with 7 optic port will be described.

3 10/100BASE-TX ETHERNET TO 7x MULTIMODE FIBER OPTIC STAR COUPLER

3.1 DESCRIPTION

Star coupler is communication device that transfer data from one (master) to more than one (slave) port. Example is when we need access to one device with several PCs. It can also be used when communication from PC to multiple devices is needed.

This device contains one Ethernet interface (master) and seven 820 nm wave length multimode fiber optic (slaves). Data is send from master port to all slave ports. On the other hand, data from either slave port is send to master port only.


Wide power supply voltage allows connection to all common station batteries. Additionally it can be also connected to standard AC voltages.

This device is intended for use in cubicles and cabinets in all kinds of power production, transmission and distribution stations. It requires no maintenace. All normaly used connectors, switches and light indicators are accessed at the front side of the device. One light indicator indicates power supply voltage, others indicate communication transfer.

Fiber optic communication allows longer distances between devices without electromagnetic disturbances. Fiber optic logic can be set to positive or negative logic for transmitter and receiver separatedly. They can be set by DIP switch at the front side of the communication interface.


3.2 TYPICAL APPLICATIONS

Typical application is communication with PC with SCADA application, in control room and protection relays, power meters, etc with FO mm, in switchgear, without electromagnetic disturbances.

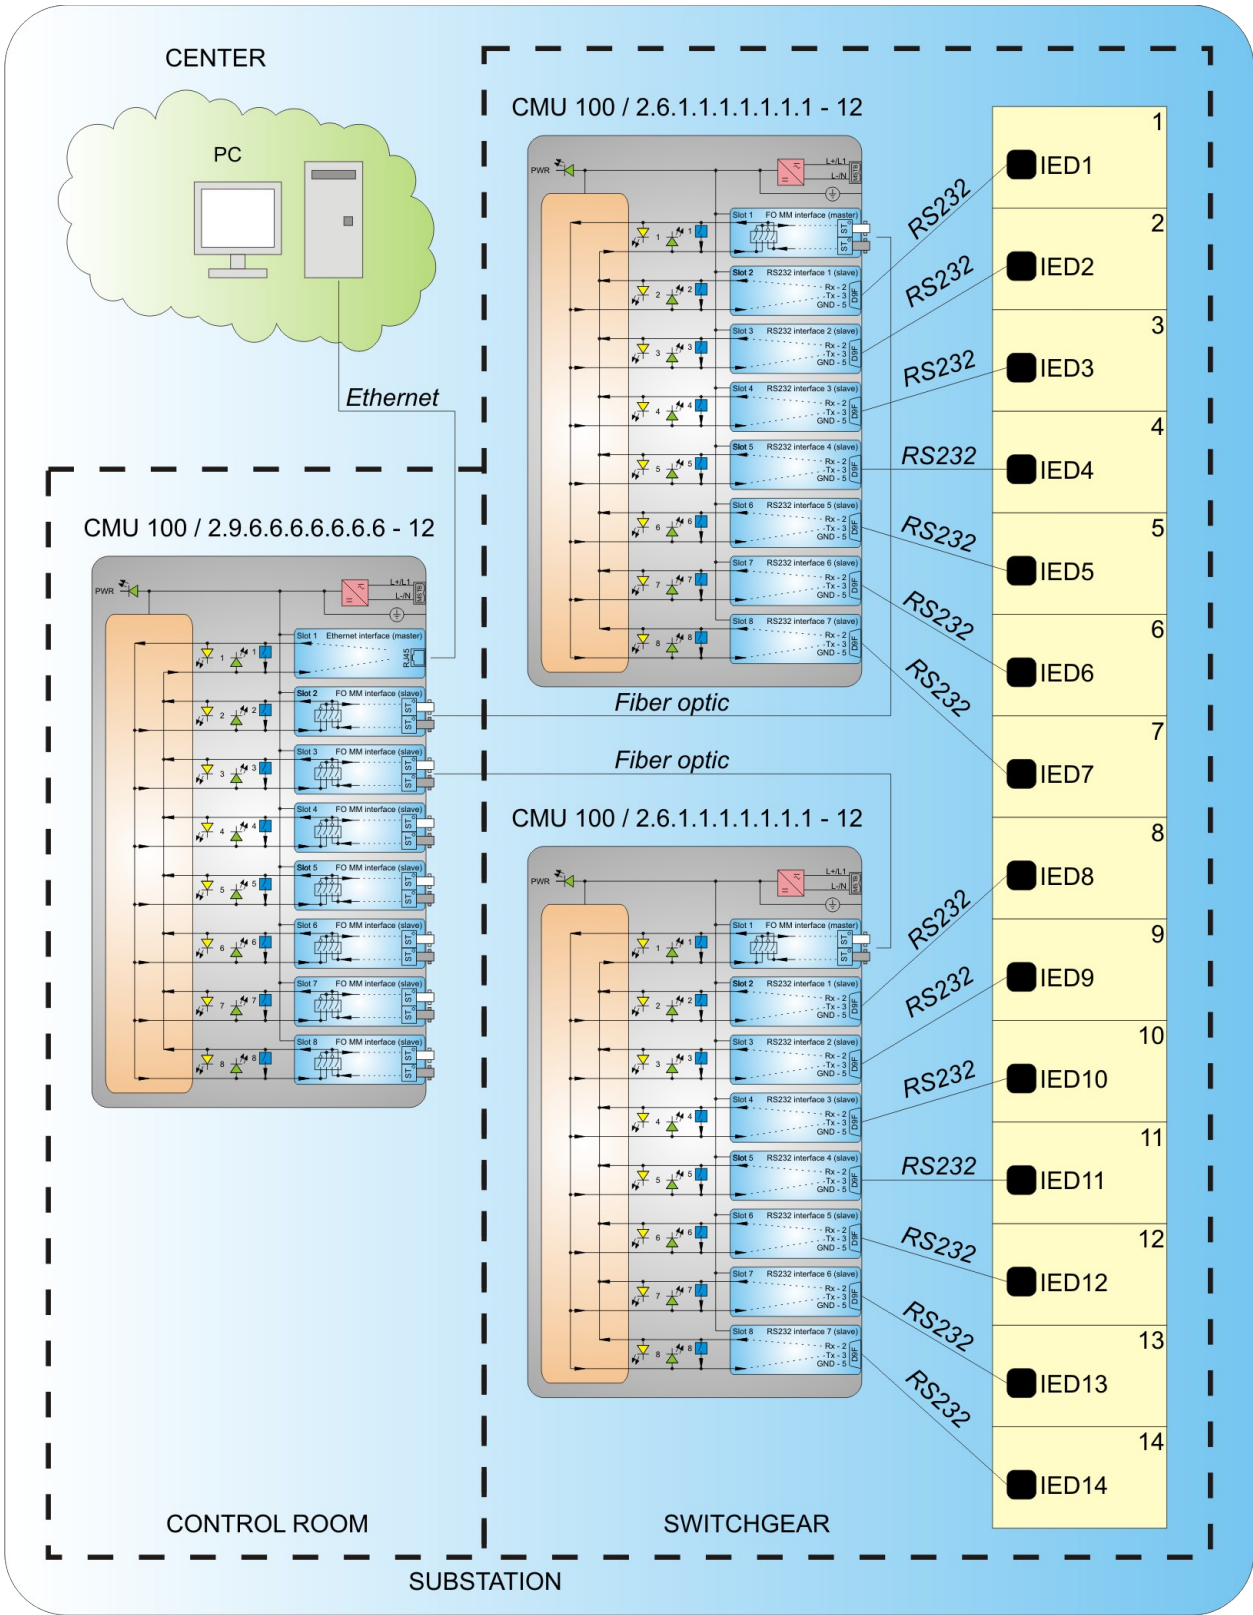

Picture 2: Typical application

3.3 APPEARANCE

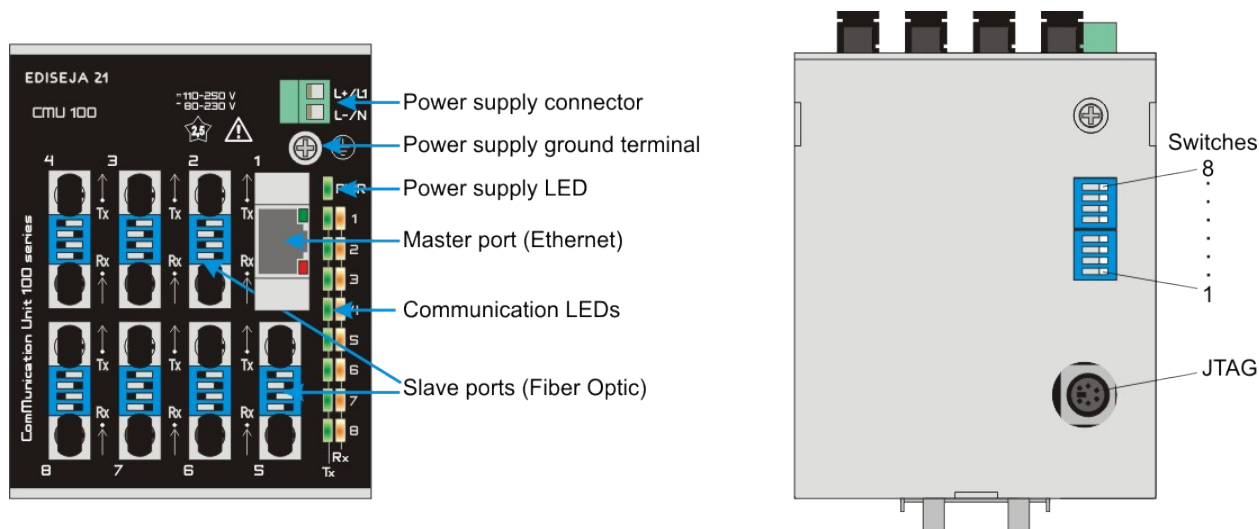

Picture 3: Front view (left) & bottom view (right)

3.4 HARDWARE DESCRIPTION

This configuration of device is made from main board (power supply, LEDs, switches and logic switch), one Ethernet interface board and seven multimode fiber optic boards.

3.4.1 MAIN BOARD

Power LED indicates that device is turned on. The right LEDs of one port shows activity on receive (Rx) line and the left one shows activity on transmit (Tx) line.

On the bottom side of device are switches and JTAG connector which is intended for downloading necessary software. Do not connect anything to that connector.

Additional switches allows echo on each port. Echo can be set on or off for each port.

Switches

Switch	1	2	3	4
Description	Echo port 1	Echo port 2	Echo port 3	Echo port 4
Position OFF	Echo off	Echo off	Echo off	Echo off
Position ON	Echo on	Echo on	Echo on	Echo on
Default position	OFF	OFF	OFF	OFF

Switch	5	6	7	8
Description	Echo port 5	Echo port 6	Echo port 7	Echo port 8
Position OFF	Echo off	Echo off	Echo off	Echo off

Switch	5	6	7	8
Position ON	Echo on	Echo on	Echo on	Echo on
Default position	OFF	OFF	OFF	OFF

Configuration of ports

Port	1	2	3	4	5	6	7	8
Interface	Ethernet	FO MM	FO MM	FO MM	FO MM	FO MM	FO MM	FO MM

3.4.2 ETHERNET INTERFACE BOARD

Description

10/100Base-TX ethernet port with one serial com port server and RJ45 connector. It enables communication on serial port with 300 bit/s to 921,6 kbit/s. Additional programs can create virtual com port on computer, which is connected to the CMU IP number. This interface also enables connection between two CMU devices via ethernet.


LED description

Upper LED - Link	
State	Meaning
Off	No Link
Amber	10 Mbit/s
Green	100 Mbit/s

Lower LED - Activity	
State	Meaning
Off	No Activity
Amber	Half Duplex
Green	Full Duplex


RJ45 Ethernet Port Pin Configuration

Signal	Direction	Contact	Function
TX+	Out	1	Differential Ethernet transmit data +
TX-	Out	2	Differential Ethernet transmit data -
RX+	In	3	Differential Ethernet receive data +
Not used		4	Terminated
Not used		5	Terminated
RX-	In	6	Differential Ethernet receive data -
Not used		7	Terminated
Not used		8	Terminated
Chassis ground		Case	

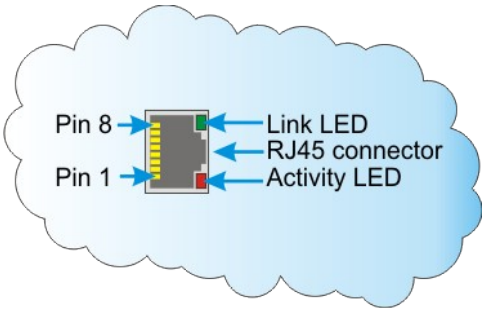

Picture 4: RJ45 connector

Cable

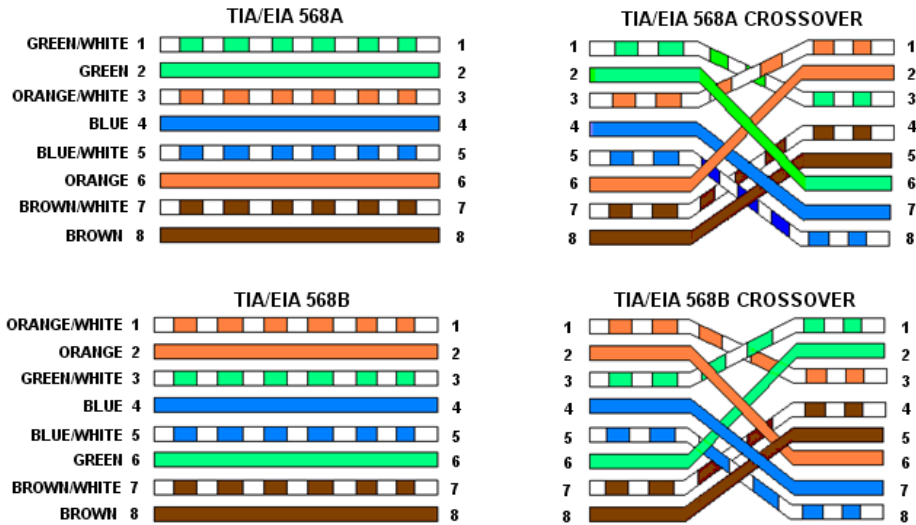


Picture 5: Cable

If device is connected to the switch, TIA/EIA 568A or TIA/EIA 568B cable should be used. If device is connected to the PC without cable detection option, TIA/EIA 568A CROSSOVER or TIA/EIA 568B CROSSOVER should be used.

Software setting

For using this interface two programs are needed: CPR Manager and Installer. Both can be obtained from www.ediseja21.com/cmu100-2ports.htm or www.lantronix.com. CPR Manager is needed for setting and redirecting Ethernet port to the virtual com port on PC. Installer is needed for setting serial com port speed, parity, flow control,...

3.4.2.1 LANTRONIX CPR MANAGER

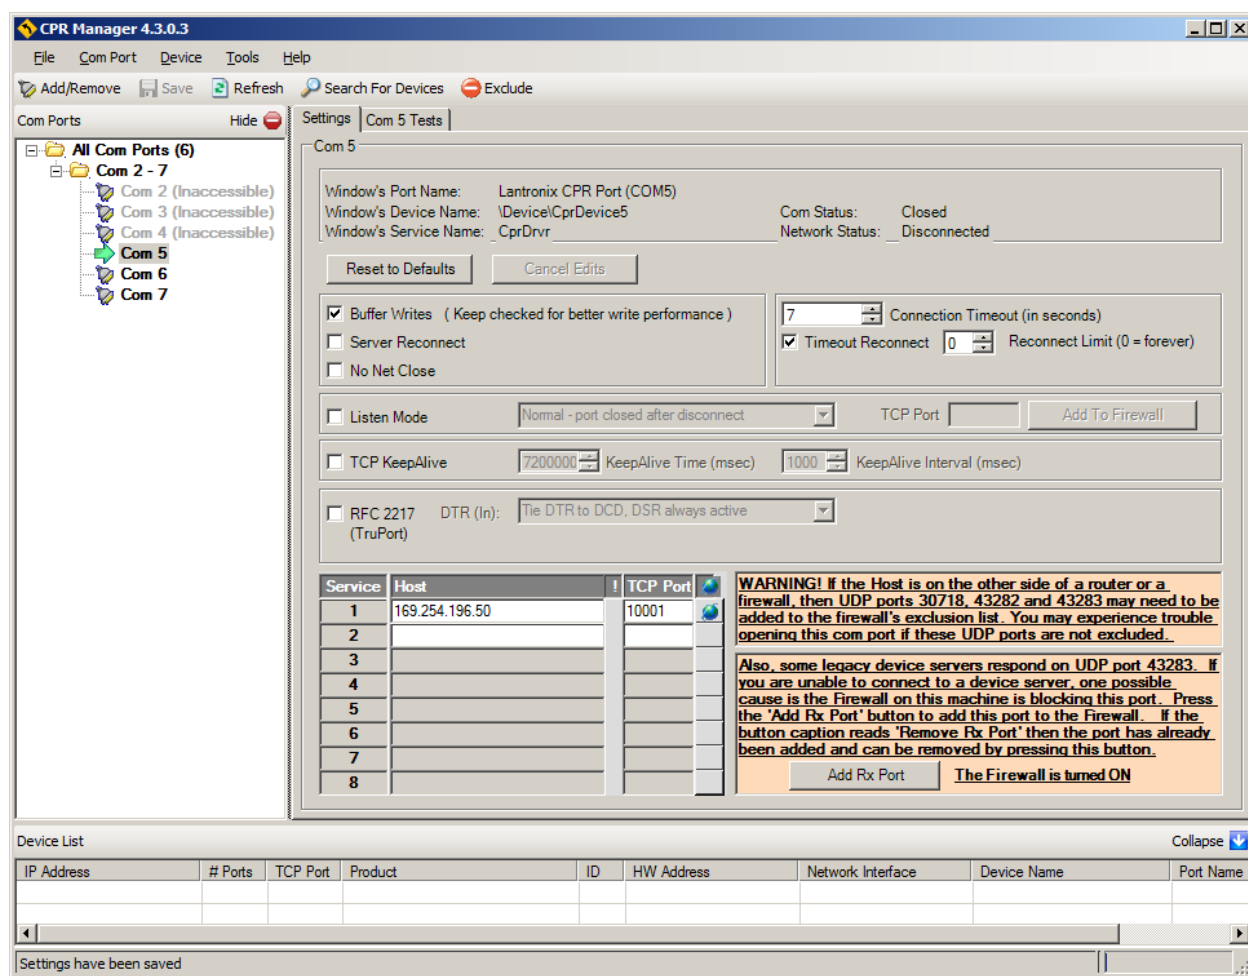


Picture 6: CPR Manager program

Set CMU IP number and TCP Port to 10001 to Com port that is needed.


NOTE! Press „Save“ to save settings!

3.4.2.2 LANTRONIX INSTALLER SETTINGS


HARDWARE DESCRIPTION

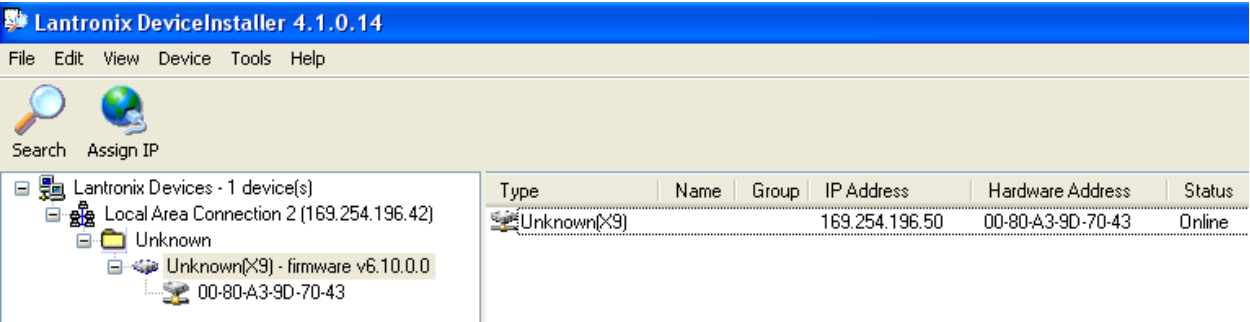

Picture 7: Start program and press "Search" to find device, then select device to be set

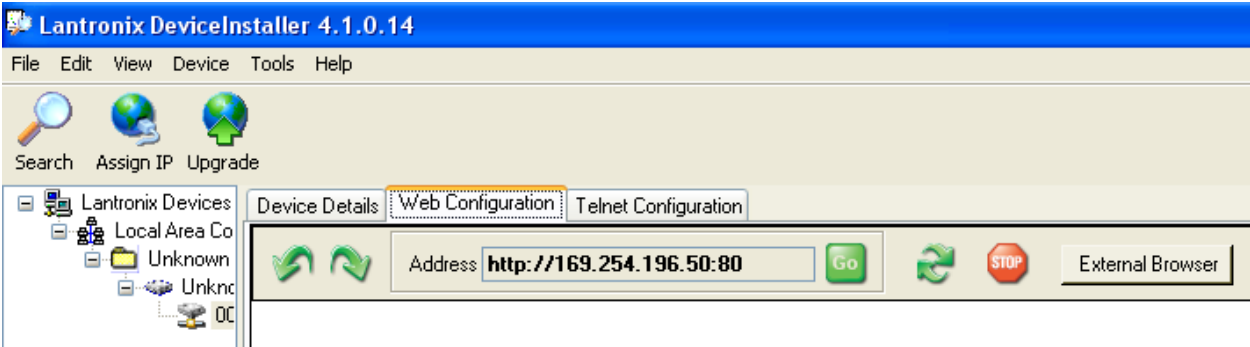

Picture 8: Press "Web Configuration"

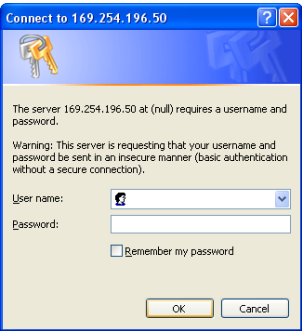

Picture 9: Press "Ok"

Address: <http://169.254.196.50:80> Go External Browser

XPort LANTRONIX

Network Settings

Network Mode:

IP Configuration

☐ Obtain IP address automatically

Auto Configuration Methods

BOOTP: ☒ Enable ☐ Disable

DHCP: ☒ Enable ☐ Disable

AutoIP: ☒ Enable ☐ Disable

DHCP Host Name:

☒ Use the following IP configuration:

IP Address:

Subnet Mask:

Default Gateway:

DNS Server:

Ethernet Configuration

☒ Auto Negotiate

Speed: ☒ 100 Mbps ☐ 10 Mbps

Duplex: ☒ Full ☐ Half

OK

Picture 10: Use „IP Configuration/Use the following IP configuration:“ settings and set IP according to your needs.

Address: <http://169.254.196.50:80> Go External Browser

XPort LANTRONIX

Server Settings

Server Configuration

Enhanced Password: ☐ Enable ☒ Disable

Telnet/Web Manager Password:

Retype Password:

Advanced

ARP Cache Timeout (secs):

TCP Keepalive (secs):

Monitor Mode @ Bootup: ☒ Enable ☐ Disable

CPU Performance Mode: ☐ Low ☒ Regular ☐ High

HTTP Server Port:

Config Server Port:

MTU Size:

TCP Re-transmission timeout (ms):

OK

Picture 11: Set as shown.

Address **http://169.254.196.50:80**

Go

STOP

External Browser

XPort[®]

LANTRONIX[®]

Home

Network

Server

Serial Tunnel

Hostlist

Channel 1

Serial Settings

Connection

Email

Trigger 1

Trigger 2

Trigger 3

Configurable Pins

Apply Settings

Apply Defaults

Hostlist Settings

Retry Settings


Retry Counter: Retry Timeout:

Host Information

No.	Host Address	Port	No.	Host Address	Port
1	0.0.0.0	0	2	0.0.0.0	0
3	0.0.0.0	0	4	0.0.0.0	0
5	0.0.0.0	0	6	0.0.0.0	0
7	0.0.0.0	0	8	0.0.0.0	0
9	0.0.0.0	0	10	0.0.0.0	0
11	0.0.0.0	0	12	0.0.0.0	0

OK

Picture 12: Hostlist settings

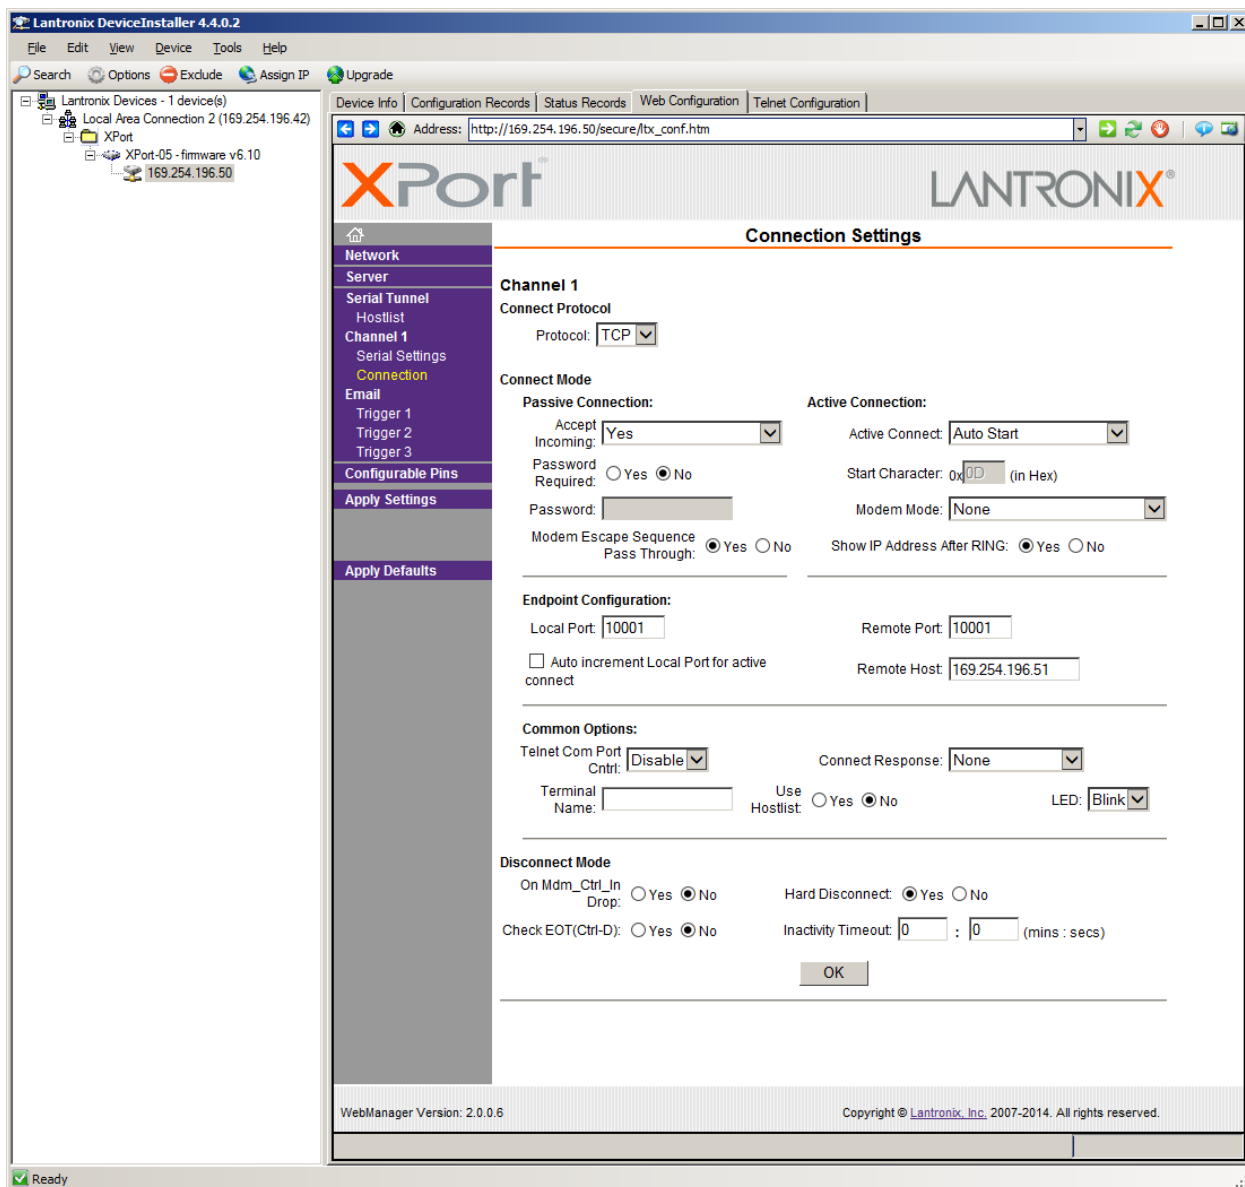

Picture 13: Connection settings

„Endpoint Configuration/Local Port“ settings must be set at 10001!

If two CMU devices need to be connected via ethernet port, set following also:

- ◆ „Connect Mode / Active Connection / Active Connect to Auto Start
- ◆ „Endpoint Configuration / Remote Port“ to 10001
- ◆ „Endpoint Configuration / Remote Host“ to other CMU IP.

Picture 14: „Port settings/Protocol“ settings must be set at RS232! Set other port settings according to your needs.

NOTE! Always press "OK" when settings is changed. Press „Apply Settings“ to save settings into device! Wait for device to reset.

NOTE! While device is resetting, it is recommended that web browser is restarted. Otherwise old settings may be displayed in web browser after device restarts.

3.4.3 MULTIMODE FIBER OPTIC INTERFACE BOARD

Description

Single, full duplex, multimode, fiber optic port with ST connectors with positive or negative logic.


Hardware settings

For proper functioning of that board, optic logic must be set:

Fiber optic logic settings


Switch SW1	Light in idle state	1	2	3	4
Positive logic	OFF	OFF	ON	OFF	ON

Switch SW1	Light in idle state	1	2	3	4
Negative logic	ON	ON	OFF	ON	OFF

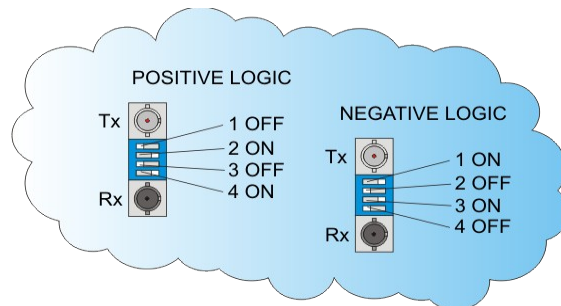

Picture 15: Multimode fiber optic interface board appearance

4 SCHEMATIC

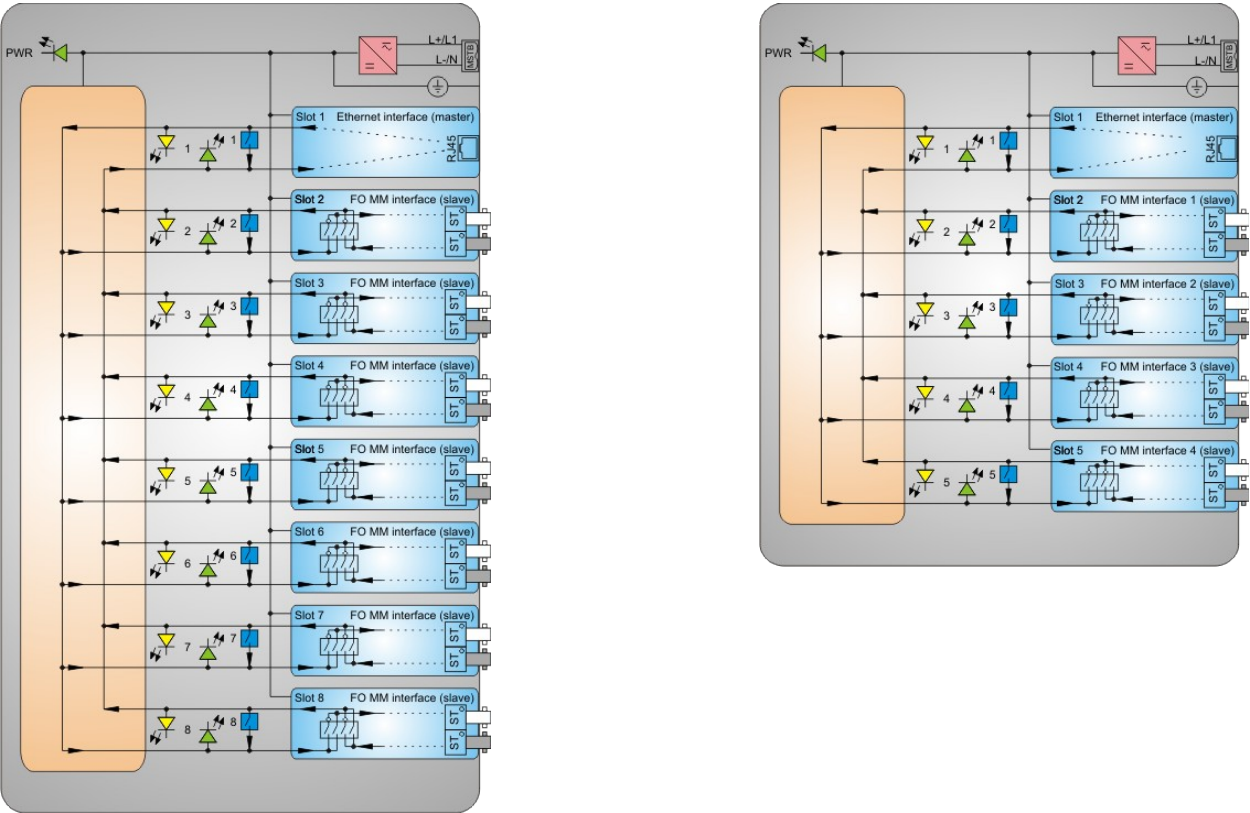

Picture 16: Left: CMU 100 / 2.9.6.6.6.6.6.6 – 12 & CMU 100 / 8.9.6.6.6.6.6.6 – 12
Right: CMU 100 / 2.9.6.6.6.6 – 12 & CMU 100 / 8.9.6.6.6.6 – 12 general diagram

5 INSTALLATION

5.1 INSTALLATION




Warning!

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described devices after being familiar with warnings and safety notices in this paper and other safety regulations.

Following instruction must be taken into consideration:

- ◆ The device must be accessible to qualified personnel only.
- ◆ The device is permitted to operate in enclosed housing or cabinet only.
- ◆ The device location must be vibration-free.
- ◆ The admissible operating temperature must be observed.
- ◆ Check the device for damage at unpacking. If device is damaged it must not be installed but it should be send to the manufacturer for repair.
- ◆ The device should not be opened.
- ◆ The device should be mounted on a 35 mm rail (acc to EN 50022).
- ◆ Attach ground wire before attaching power supply. Device must be grounded during operation!
- ◆ Single core or stranded wire 0,5 – 2,5 mm² must be used for power supply connection. If stranded wire is used, ferrules must be used to prevent fraying. Recommended stripping length is 5 mm.
- ◆ Protective earthing wire must be terminated with tinned copper ear terminal.
- ◆ The prescribed bending radius of the optical fibre cables must be observed.

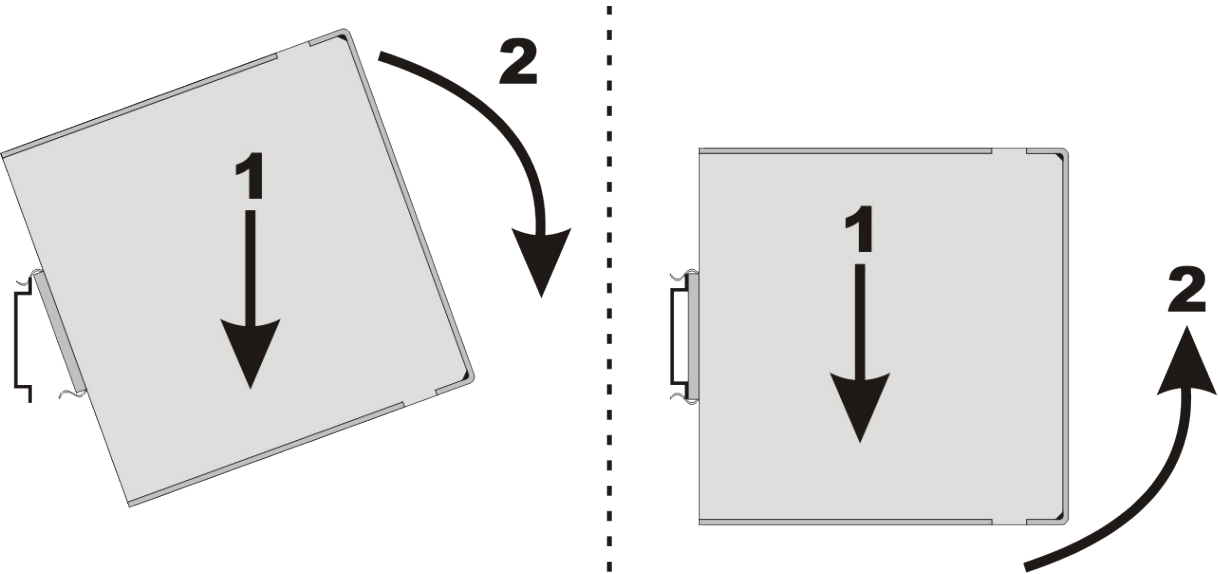

Picture 17: left. installation, right: deinstallation

6 COMMISSIONING & MAINTENANCE

6.1 COMMISSIONING

**Warning!**

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described device after being familiar with warnings and safety notices in this paper and other safety regulations.

Following instruction must be taken into consideration:

- ◆ Device must operate completely assembled! Device must be used as described. No modifications of the device should be made.
- ◆ Attach ground wire before attaching power supply. Device must be grounded during operation!
- ◆ Check if the power supply voltage complies with device operation voltage.
- ◆ Do not open device while it is energized! Hazardous voltage is present inside the device.
- ◆ If single mode fiber optic interface is used, do not look into the laser beam.

6.2 MAINTENANCE

The device is maintenance-free. Disconnect power supply before cleaning it. Use moist cloth. Do not use liquids.

7 TECHNICAL DATA

Power supply			
		CMU 100 / 2...	CMU 100 / 8...
Rated voltage	DC	110 - 250 V	48 - 60 V
	AC	230 V	48 V
Permissible voltage range	DC	88 - 350 V	38 - 72 V
	AC	70 - 264 V	30 - 50 V
Input current	DC	100 - 50 mA	220 - 200 mA
	AC	85 mA	300 mA
Fuse (internal)	2 A T		
Power supply indicator	green LED marked PWR		
Voltage dips	20 ms		
Connector type	screw type „MSTB“ Phoenix 2pin		
Power Supply Wire	crossection	0,5 – 2,5 mm ²	
	type	single or stranded wire	
	voltage rating	500 V	
	colour	see valid standard	
Ground wire	crossection	Cu, 2,5 mm ²	
	colour	see valid standard	

Communication port 10/100Base-Tx (interface type 9)	
Type	ethernet
Direction	full duplex
Speed setting*	300 bit/s to 921,6 kbit/s
Number of serial ports	1
Manufacturer	Lantronix
Type	Xport XP1001000-05R
Link	WWW.lantronix.com


Communication port Multimode Fiber Optic (interface type 6)				
Type	multimode fiber optic			
Wave lenght	820 nm			
Fiber size	50/125 µm	62,5/125 µm	100/140 µm	200 µm HCS
Distance (approx.)	600 m	2000 m	1800 m	

Communication port Multimode Fiber Optic (interface type 6)	
Optical output power	-18 dB
Reciver sensitivity	-24 dB
Laser class	I (IEC 60825-1)
Direction	full duplex
Speed*	up to 2,048 Mbit/s
Input	1 receiver (grey connector)
Output	1 transmitter (white connector)
Logic	light ON or OFF in idle state set by switch (see table)
Connector type	ST


* slowest interface defines device's maximum speed

Other data			
Weight	approx. 0,55 kg		
Dimensions (see picture)	(H)	(D)	(W)
	105 mm	111 mm + connectors	85 mm
Temperature range	0 °C to +55 °C		
Humidity operating	up to 95 % (noncondensing)		
Enclosure	Material	Al	
	IP	20	
Mount type	standard DIN 35 rail (acc. to DIN EN 50022)		
Class	I		
Overvoltage category	II		

8 DIMENSIONS

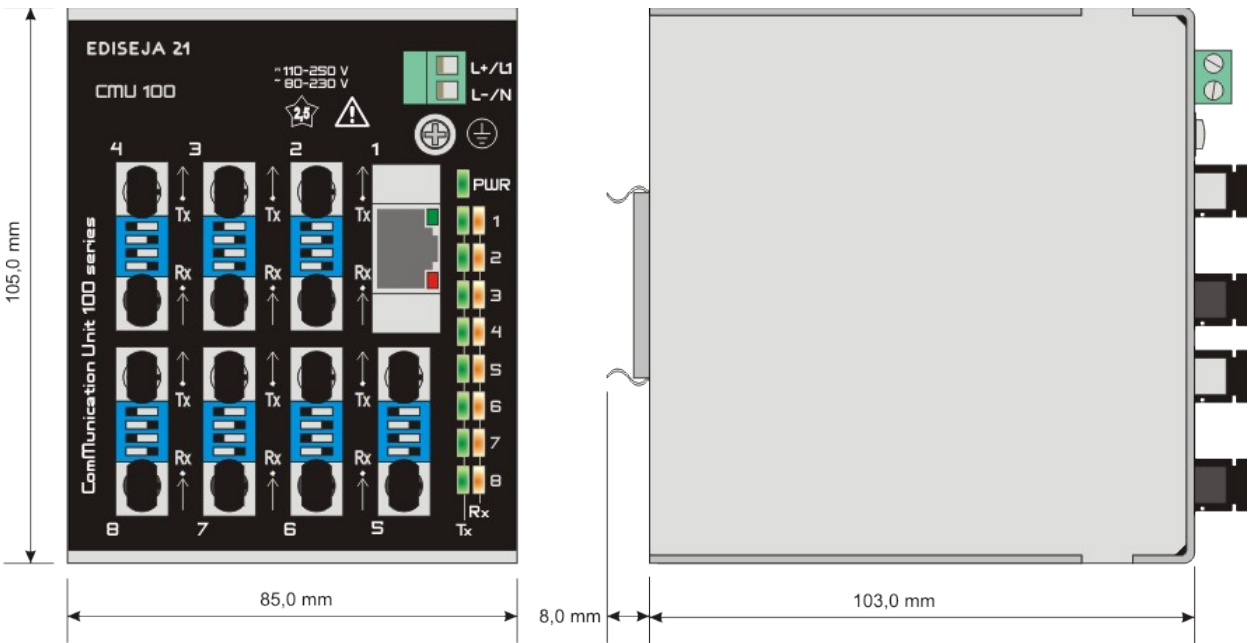

Picture 18: CMU 100 / 2.9.6.6.6.6.6 – 12 & CMU 100 / 8.9.6.6.6.6.6 - 12 dimensions

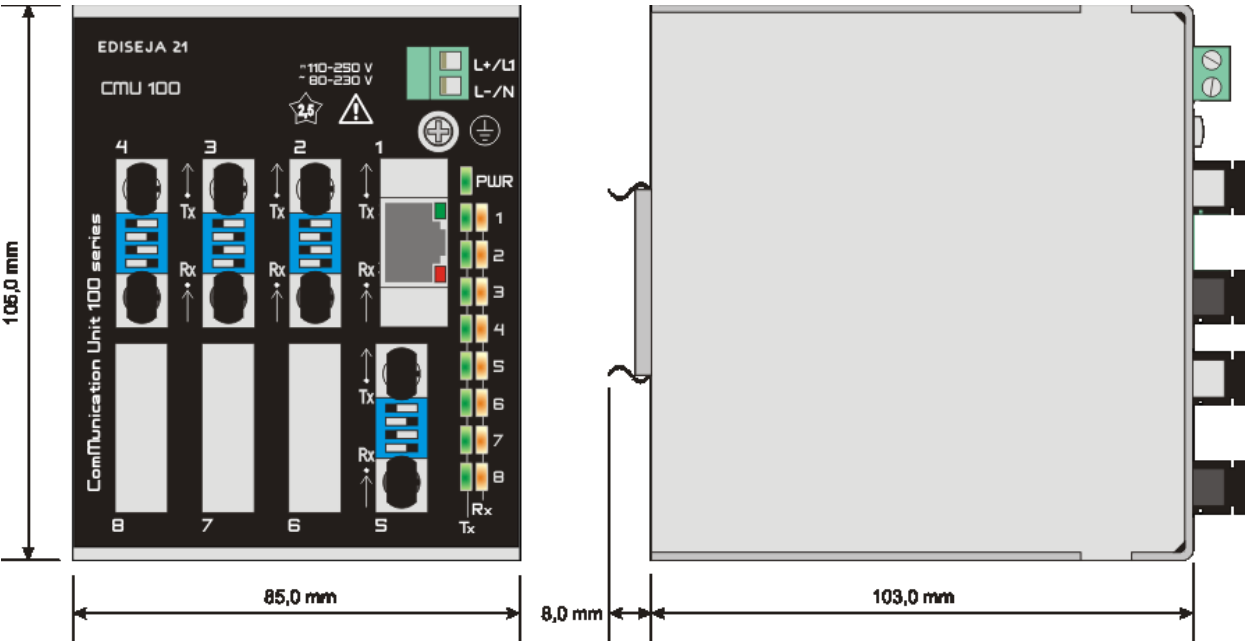

Picture 19: CMU 100 / 2.9.6.6.6.6 - 12 & CMU 100 / 8.9.6.6.6.6 - 12 dimensions

List of the most common devices:

2 ports converters

Port 1	Port 2	Detail	Type
RS232	RS485	300-2400 bit/s, high voltage power supply	CMU 100 / 1.1.L - 0
RS232	RS485	4800-38400 bit/s, high voltage power supply	CMU 100 / 1.1.M - 0
RS232	RS485	19200-115200 bit/s, high voltage power supply	CMU 100 / 1.1.5 - 0
RS232	FO SM	SC connector, 20 km, high voltage power supply	CMU 100 / 1.1.S - 0
RS232	FO SM	FC connector, 20 km, high voltage power supply	CMU 100 / 1.1.T - 0
RS232	FO SM	ST connector, 20 km, high voltage power supply	CMU 100 / 1.1.U - 0
RS232	ETH	10/100 Mbit/s, virtual com port, high voltage power supply	CMU 100 / 1.1.9 - 0
RS485	FO MM	high voltage power supply	CMU 100 / 1.5.6 - 0
RS485	FO SM	SC connector, 20 km, high voltage power supply	CMU 100 / 1.5.S - 0
RS485	FO SM	FC connector, 20 km, high voltage power supply	CMU 100 / 1.5.T - 0
RS485	FO SM	ST connector, 20 km, high voltage power supply	CMU 100 / 1.5.U - 0
RS485	ETH	10/100 Mbit/s, virtual com port, high voltage power supply	CMU 100 / 1.5.9 - 0
FO MM	RS232	high voltage power supply	CMU 100 / 1.6.1 - 0
FO MM	FO SM	SC connector, 20 km, up to 2,048 Mbit/s, high voltage power supply	CMU 100 / 1.6.S - 0
FO MM	FO SM	FC connector, 20 km, up to 2,048 Mbit/s, high voltage power supply	CMU 100 / 1.6.T - 0
FO MM	FO SM	ST connector, 20 km, up to 2,048 Mbit/s, high voltage power supply	CMU 100 / 1.6.U - 0
FO MM	ETH	500 m, 820 nm, 10/100 Mbit/s, virtual com port, high voltage power supply	CMU 100 / 1.6.9 - 0
ETH TX	ETH FX	100 Mbit/s, 1300 nm, 2000 m range, high voltage power supply	CMU 100 / 1.E.F - 0

3 ports star couplers / converters / nodes

Master	Slave 1	Slave 2	Detail	Type
RS232	RS485	FO MM	19200-115200 bit/s, high voltage power supply	CMU 100 / 2.1.5.6 - 12
RS232	FO MM	FO SM	high voltage power supply	CMU 100 / 2.1.6.S - 12
FO MM	RS232	RS485	19200-115200 bit/s, high voltage power supply	CMU 100 / 2.6.1.5 - 12
ETH	RS232	RS232	10/100 Mbit/s, virtual com port, high voltage power supply	CMU 100 / 2.9.1.1 - 12
ETH	RS232	RS485	10/100 Mbit/s, virtual com port, 19200-115200 bit/s, high voltage power supply	CMU 100 / 2.9.1.5 - 12
ETH	RS485	FO MM	10/100 Mbit/s, virtual com port, 19200-115200 bit/s, high voltage power supply	CMU 100 / 2.9.5.6 - 12
FO SM	RS232	RS232	20 km, high voltage power supply	CMU 100 / 2.1.1.S - 12
FO SM	RS232	RS485	20 km, 19200-115200 bit/s, high voltage power supply	CMU 100 / 2.1.5.S - 12

FO SM	FO MM	FO MM	20 km, up to 2,048 Mbit/s, high voltage power supply	CMU 100 / 2.6.6.S - 12
--------------	--------------	--------------	--	-------------------------------

Star couplers, high voltage power supply

Master(s)	Slaves	Detail	Type
RS232	2 x RS232	RS232 to 2 x RS232	CMU 100 / 2.1.1.1 - 12
	3 x RS232	RS232 to 3 x RS232	CMU 100 / 2.1.1.1.1 - 12
	4 x RS232	RS232 to 4 x RS232	CMU 100 / 2.1.1.1.1.1 - 12
	5 x RS232	RS232 to 5 x RS232	CMU 100 / 2.1.1.1.1.1.1 - 12
	6 x RS232	RS232 to 6 x RS232	CMU 100 / 2.1.1.1.1.1.1.1 - 12
	7 x RS232	RS232 to 7 x RS232	CMU 100 / 2.1.1.1.1.1.1.1.1 - 12
	2 x FO MM	RS232 to 2 x multimode fiber optic	CMU 100 / 2.1.6.6 - 12
	3 x FO MM	RS232 to 3 x multimode fiber optic	CMU 100 / 2.1.6.6.6 - 12
	4 x FO MM	RS232 to 4 x multimode fiber optic	CMU 100 / 2.1.6.6.6.6 - 12
	5 x FO MM	RS232 to 5 x multimode fiber optic	CMU 100 / 2.1.6.6.6.6.6 - 12
	6 x FO MM	RS232 to 6 x multimode fiber optic	CMU 100 / 2.1.6.6.6.6.6.6 - 12
	7 x FO MM	RS232 to 7 x multimode fiber optic	CMU 100 / 2.1.6.6.6.6.6.6.6 - 12
RS485	2 x RS232	RS485 to 2 x RS232	CMU 100 / 2.5.1.1 - 12
	3 x RS232	RS485 to 3 x RS232	CMU 100 / 2.5.1.1.1 - 12
	4 x RS232	RS485 to 4 x RS232	CMU 100 / 2.5.1.1.1.1 - 12
	5 x RS232	RS485 to 5 x RS232	CMU 100 / 2.5.1.1.1.1.1 - 12
	6 x RS232	RS485 to 6 x RS232	CMU 100 / 2.5.1.1.1.1.1.1 - 12
	7 x RS232	RS485 to 7 x RS232	CMU 100 / 2.5.1.1.1.1.1.1.1 - 12
	2 x FO MM	RS485 to 2 x multimode fiber optic	CMU 100 / 2.5.6.6 - 12
	3 x FO MM	RS485 to 3 x multimode fiber optic	CMU 100 / 2.5.6.6.6 - 12
	4 x FO MM	RS485 to 4 x multimode fiber optic	CMU 100 / 2.5.6.6.6.6 - 12
	5 x FO MM	RS485 to 5 x multimode fiber optic	CMU 100 / 2.5.6.6.6.6.6 - 12
	6 x FO MM	RS485 to 6 x multimode fiber optic	CMU 100 / 2.5.6.6.6.6.6.6 - 12
	7 x FO MM	RS485 to 7 x multimode fiber optic	CMU 100 / 2.5.6.6.6.6.6.6.6 - 12
FO MM	2 x RS232	Multimode fiber optic to 2 x RS232	CMU 100 / 2.6.1.1 - 12
	3 x RS232	Multimode fiber optic to 3 x RS232	CMU 100 / 2.6.1.1.1 - 12
	4 x RS232	Multimode fiber optic to 4 x RS232	CMU 100 / 2.6.1.1.1.1 - 12
	5 x RS232	Multimode fiber optic to 5 x RS232	CMU 100 / 2.6.1.1.1.1.1 - 12
	6 x RS232	Multimode fiber optic to 6 x RS232	CMU 100 / 2.6.1.1.1.1.1.1 - 12
	7 x RS232	Multimode fiber optic to 7 x RS232	CMU 100 / 2.6.1.1.1.1.1.1.1 - 12
	2 x FO MM	Multimode fiber optic to 2 x multimode FO	CMU 100 / 2.6.6.6 - 12
	3 x FO MM	Multimode fiber optic to 3 x multimode FO	CMU 100 / 2.6.6.6.6 - 12
	4 x FO MM	Multimode fiber optic to 4 x multimode FO	CMU 100 / 2.6.6.6.6.6 - 12
	5 x FO MM	Multimode fiber optic to 5 x multimode FO	CMU 100 / 2.6.6.6.6.6.6 - 12

ORDERING

	6 x FO MM	Multimode fiber optic to 6 x multimode FO	CMU 100 / 2.6.6.6.6.6.6.6 - 12
	7 x FO MM	Multimode fiber optic to 7 x multimode FO	CMU 100 / 2.6.6.6.6.6.6.6 - 12
Master(s)	Slaves	Detail	Type
RS232, RS485	6 x FO MM	8 channel star coupler RS232 & RS485 to 6 x multimode fiber optic, high voltage power supply	CMU 100 / 2.1.5.6.6.6.6.6 - 5
RS232, FO MM	6 x FO MM	8 channel star coupler RS232 & multimode fiber optic to 6 x multimode fiber optic, high voltage power supply	CMU 100 / 2.1.6.6.6.6.6.6 - 5
4 xFO MM	4x RS232	4 channel converter multimode fiber optic to RS232, high voltage power supply	CMU 100 / 2.6.6.6.6.1.1.1.1 - 7

Contact:

Ediseja 21, razvoj elektronskih naprav, d.o.o.

Stegne 21C

1000 Ljubljana

Slovenia – EU

Tel: 00 386 51 643 411, 051 643 411

grega.flander@ediseja21.com

www.ediseja21.com